
SOP Install/Troubleshoot SYN-50-30 or SYN-100-30 with MODXHBP

Install as indicated.

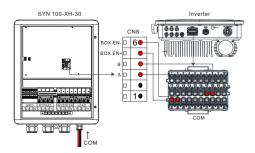

Connecting the communication cables to the XH Inverter

| COM Port | XH Inverter COM | SYN 100-XH-30 COM | Control Board |
|----------|--------------------|----------------------|---------------|
| RS485 A | PIN 17 | PIN 3 | |
| RS485 B | PIN 18 | PIN 4 | CN8 |
| BOX.EN+ | PIN 21 | PIN 5 | CNO |
| BOX.EN- | PIN 22 | PIN 6 | |
| | | | |

Debug with the following table

| SYN 30 Light | MODXHBP | | |
|--------------|--------------|------------|----------------------------------|
| status | Light status | Definition | Action |
| | | | If from this state the system |
| | | | does not go offgrid, turn off |
| Fixed Green | Fixed Green | On grid | AC and factory reset inverter |
| Blinking | | Offgrid | |
| Green | Fixed Green | mode | |
| | Blinking | Inverter | |
| Fixed Green | Green | warning | Solve inverter issue first |
| | | | Check A and B from SYN, |
| | | SYN comm | check if inverter registers 3079 |
| Blinking Red | | error | and 3082 are 1 |
| | | | Inverter error, if 609 check |
| | | | BOXEN- and BOXEN+ from |
| | | | SYN, unplug from comm port |
| | | | and check whether these are |
| | Blinking Red | | shorted. |
| Fixed Red | | SYN error | |
| | | SYN | |
| Yellow | | upgrade | |